 
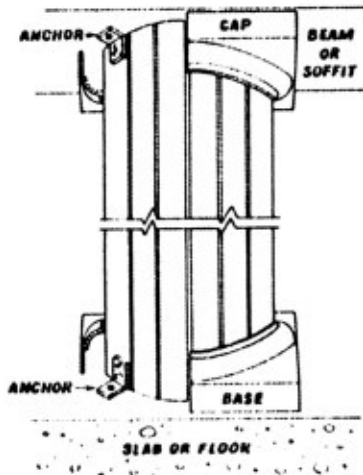 


B&B Wood Products – Aluminum Column Instruction

sales@bbwood.com

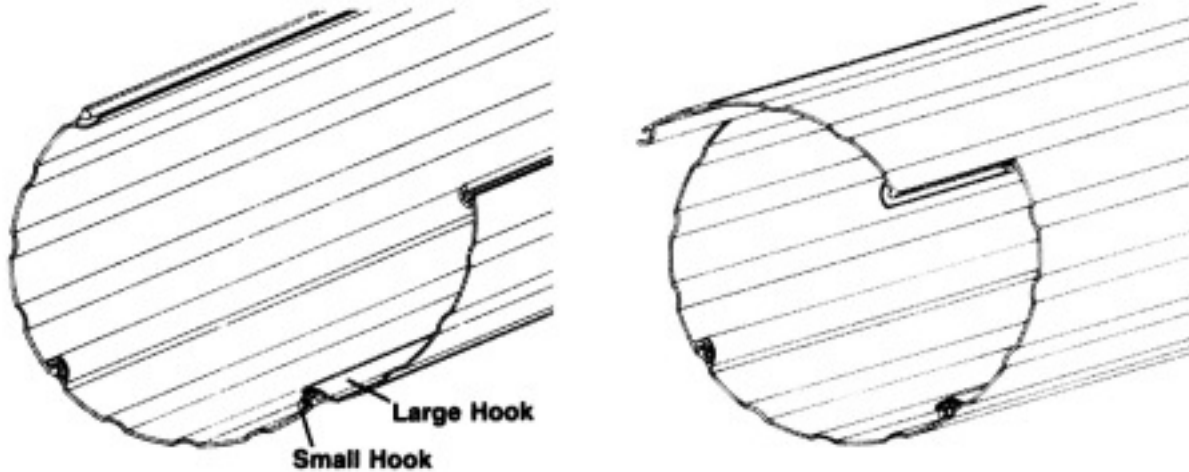


ROUND COLUMN Installation

1. Measure opening, cut column staves 1/8" longer.
2. Hook staves together, small hook joins large hook.
3. Hook all staves together except one, slide remaining stave into place.
4. Put cap and base on column, set in place and plumb with a level. Let weight down on column.
5. Slide cap and base into place and tighten set screws.
6. "Anchor Clips" are available when needed or required

B&B Wood Products – Aluminum Column Instruction


sales@bbwood.com

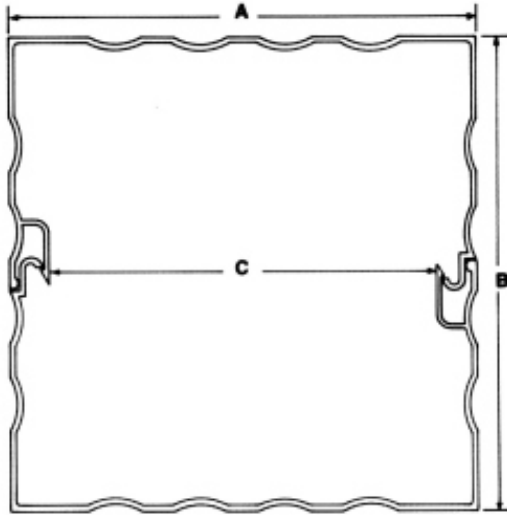

Installation

SQUARE COLUMNS

1. Measure opening, cut column staves 1/8" longer.
2. Snap staves together, use rubber mallet to tap. Snap from center of column out toward each end of column. (for columns with four staves assemble into two piece halves, then snap together)
3. Put cap and base on column, set in place and plumb with a level. Let weight down on column.
4. Slide cap and base into place and tighten set screws.
5. "Anchor Clips" are available when needed or required.

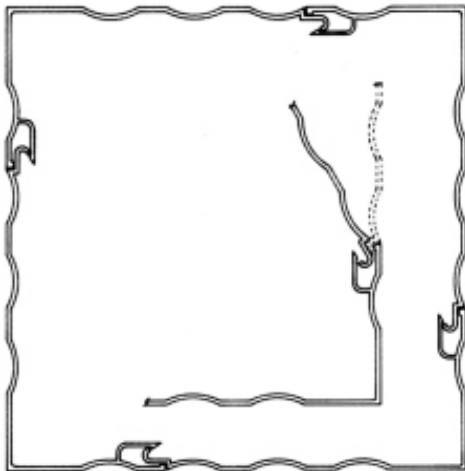

Note: All square columns snap together, they do not hinge or slide together like our round columns.